

KUN05


ASSEMBLY INSTRUCTION

WOODEN TOP




X1

1 LEG

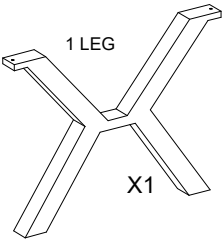

X1

2 LEG

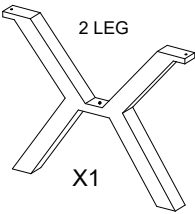

X1



A

X01
5 MM



B

X04
8X60 MM




C

X01
8X60 MM




D

X5
8X25




x2


STEP-01

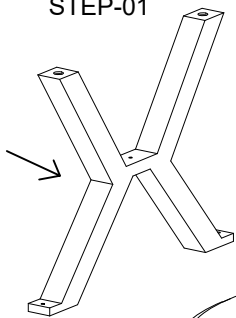


STEP-02

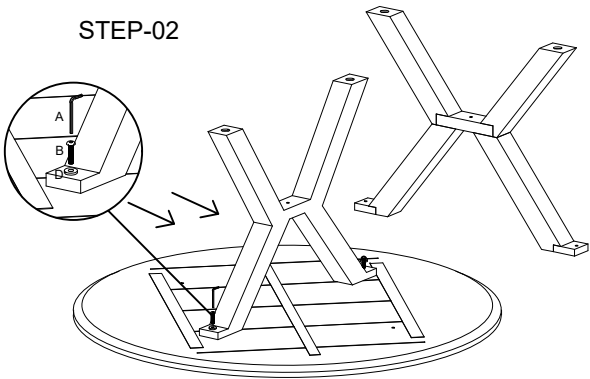


STEP-03

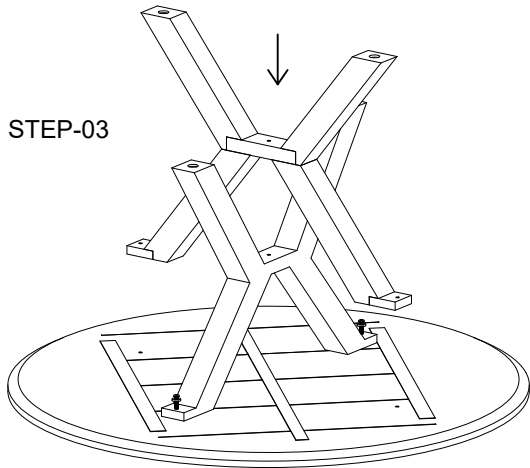

STEP-04

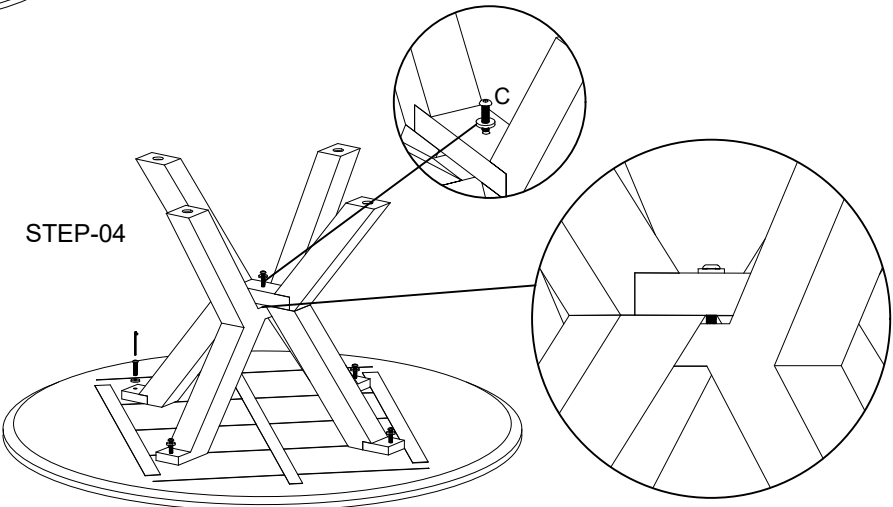

Do not tighten the screw fully.
Keep a gap of 6 to 8 mm
between both the legs.

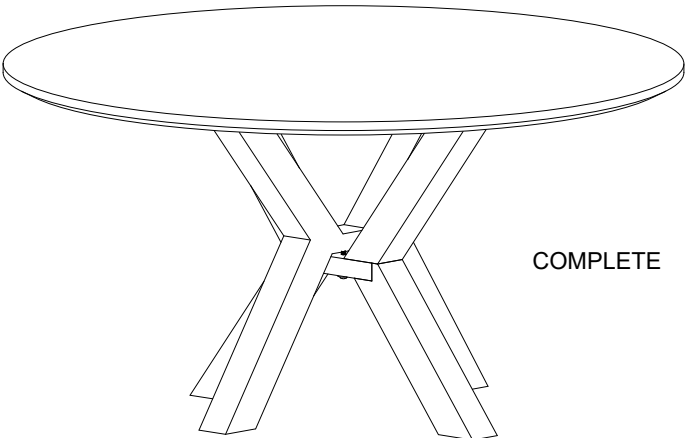

COMPLETE