


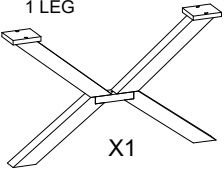
ASSEMBLY INSTRUCTION

WOODEN TOP




X1

1 LEG




X1

2 LEG

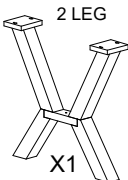


X1

A




X01
5 MM

B




X08
8X50 MM

C




X01
8X65 MM

D




X9
8X25




x2


STEP-01

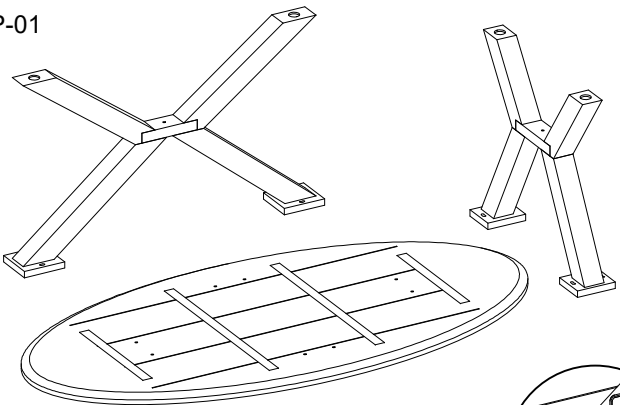


STEP-02

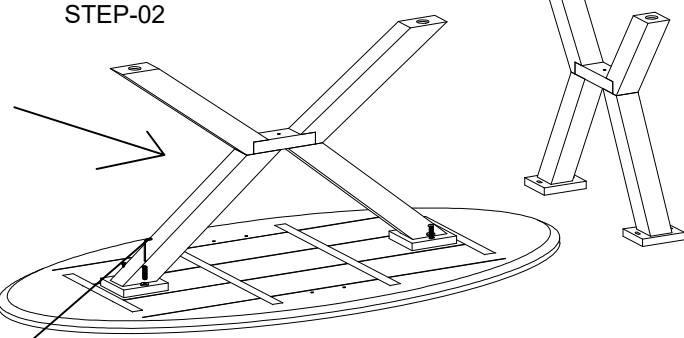


STEP-03

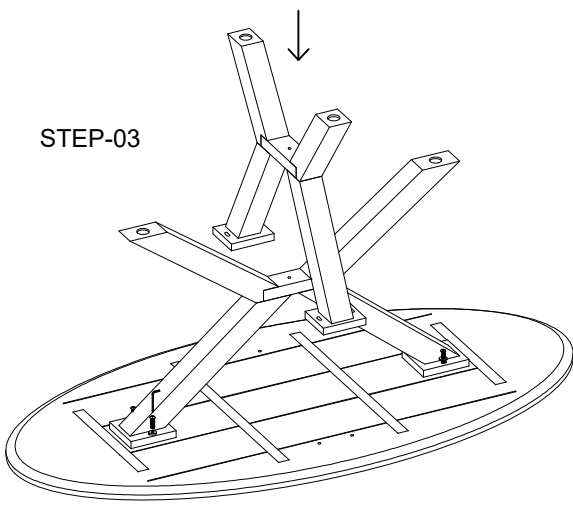

STEP-04

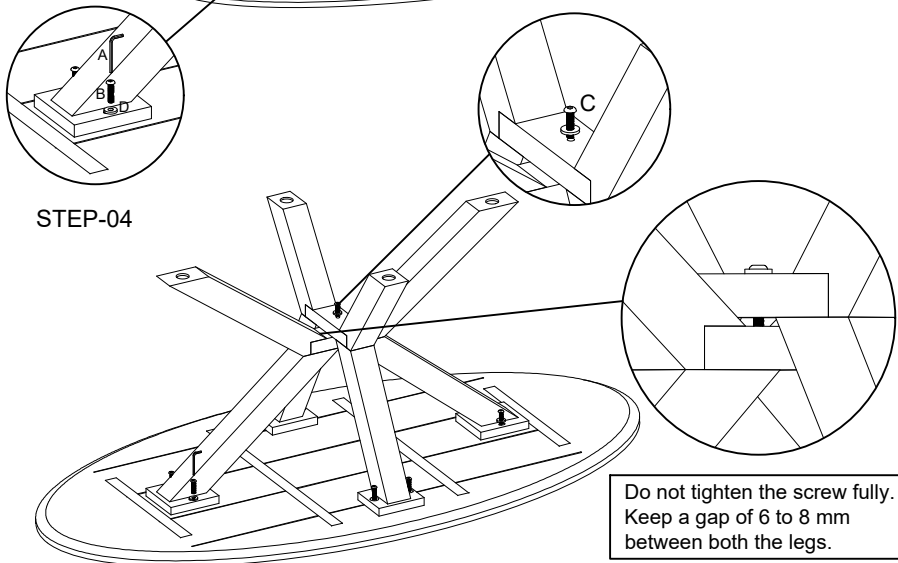

Do not tighten the screw fully.
Keep a gap of 6 to 8 mm
between both the legs.

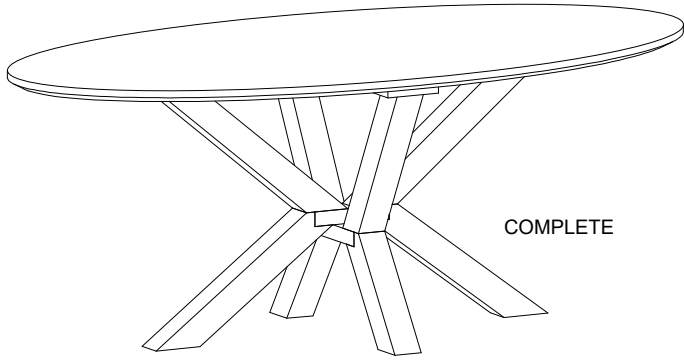

COMPLETE