


KUN02

# ASSEMBLY INSTRUCTION

WALL MOUNTED DRAWER

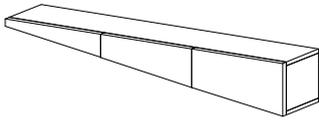

**A**

X1 SET


PVC DOWEL



**B**

X8


30X6 SCREW



**C**

X8

H HOOK

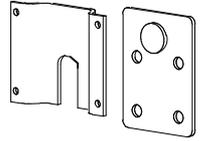

**D**

X2


STEP 1





STEP 2



STEP 3

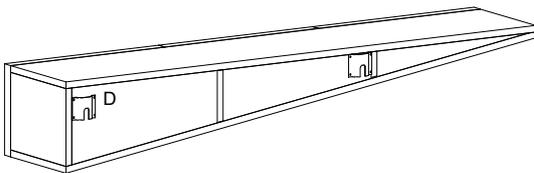

STEP 4

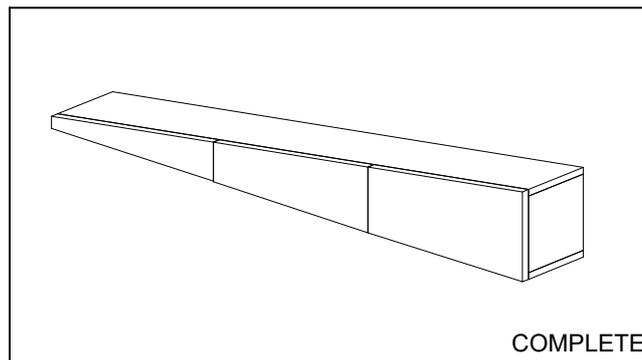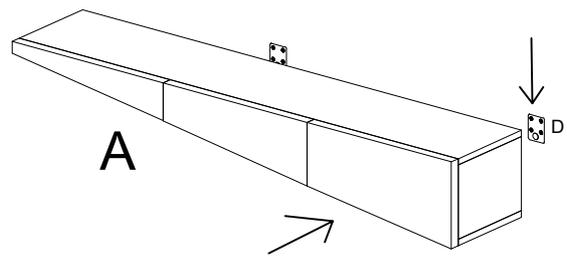

COMPLETE