


KUN03


# ASSEMBLY INSTRUCTION

WOODEN TOP

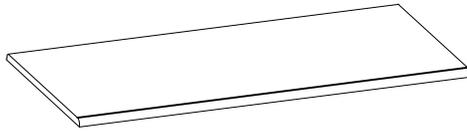

X1

LEG



X2



A

X01  
5 MM




B

X14  
8X40 MM



C



X14  
8X25




x2

STEP-01


3

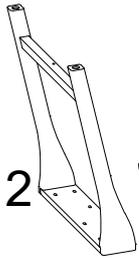

2


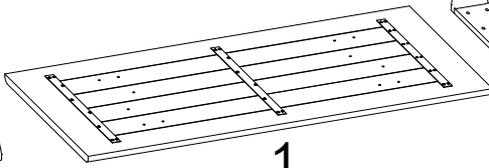


1

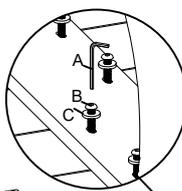


4



STEP-02

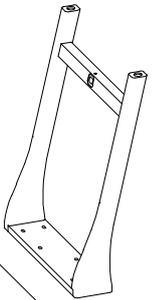

STEP-03

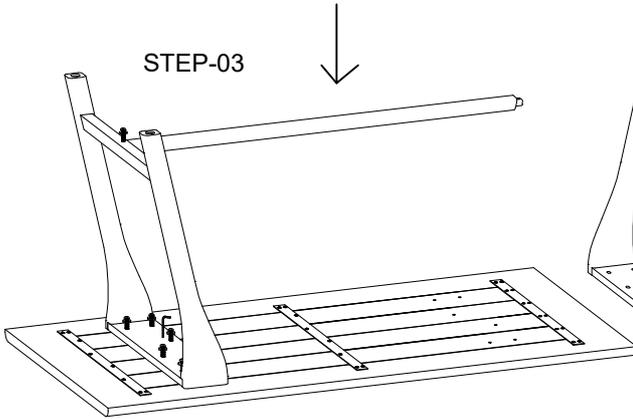

STEP-04

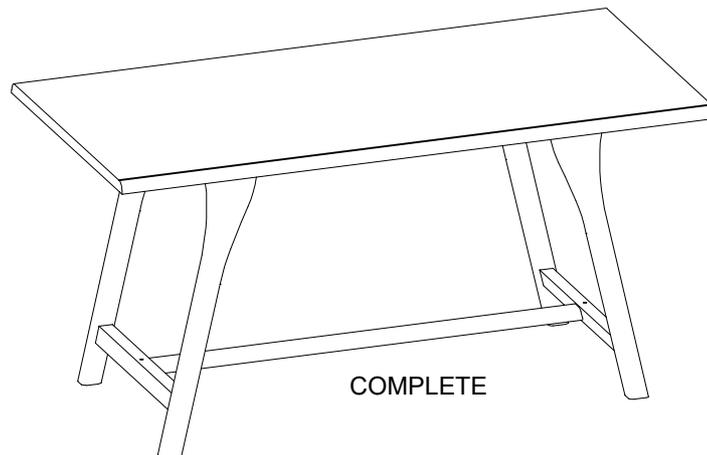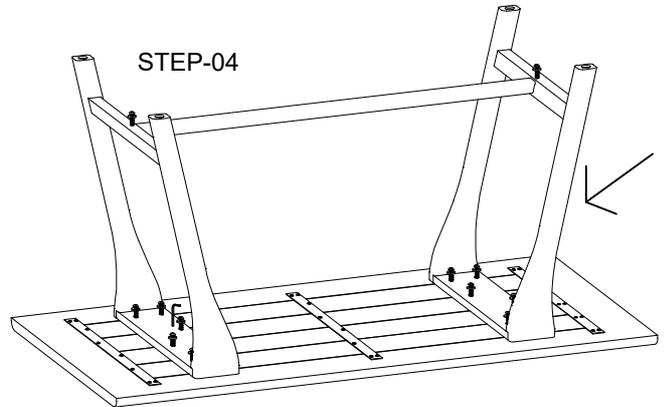

COMPLETE