


KUN07

ASSEMBLY INSTRUCTION


WALL MOUNTED DRAWER

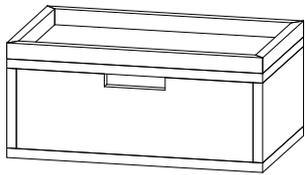

A

X1 SET


PVC DOWEL



B

X8


30X6 SCREW



C

X8


H HOOK

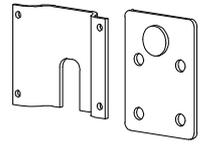

D

X2


STEP 1

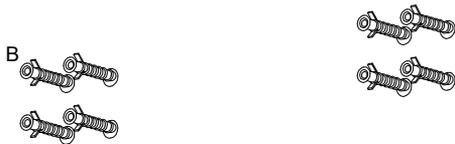


STEP 2




STEP 3

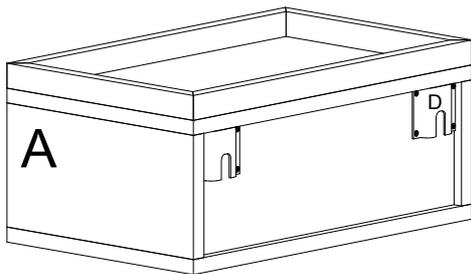

STEP 4

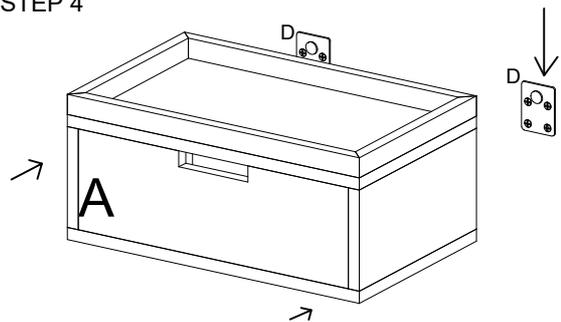

STEP 5 COMPLITE

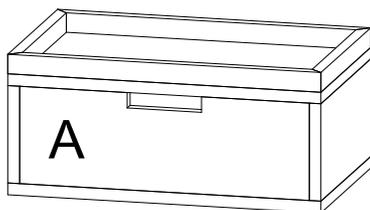

COMPLETE