

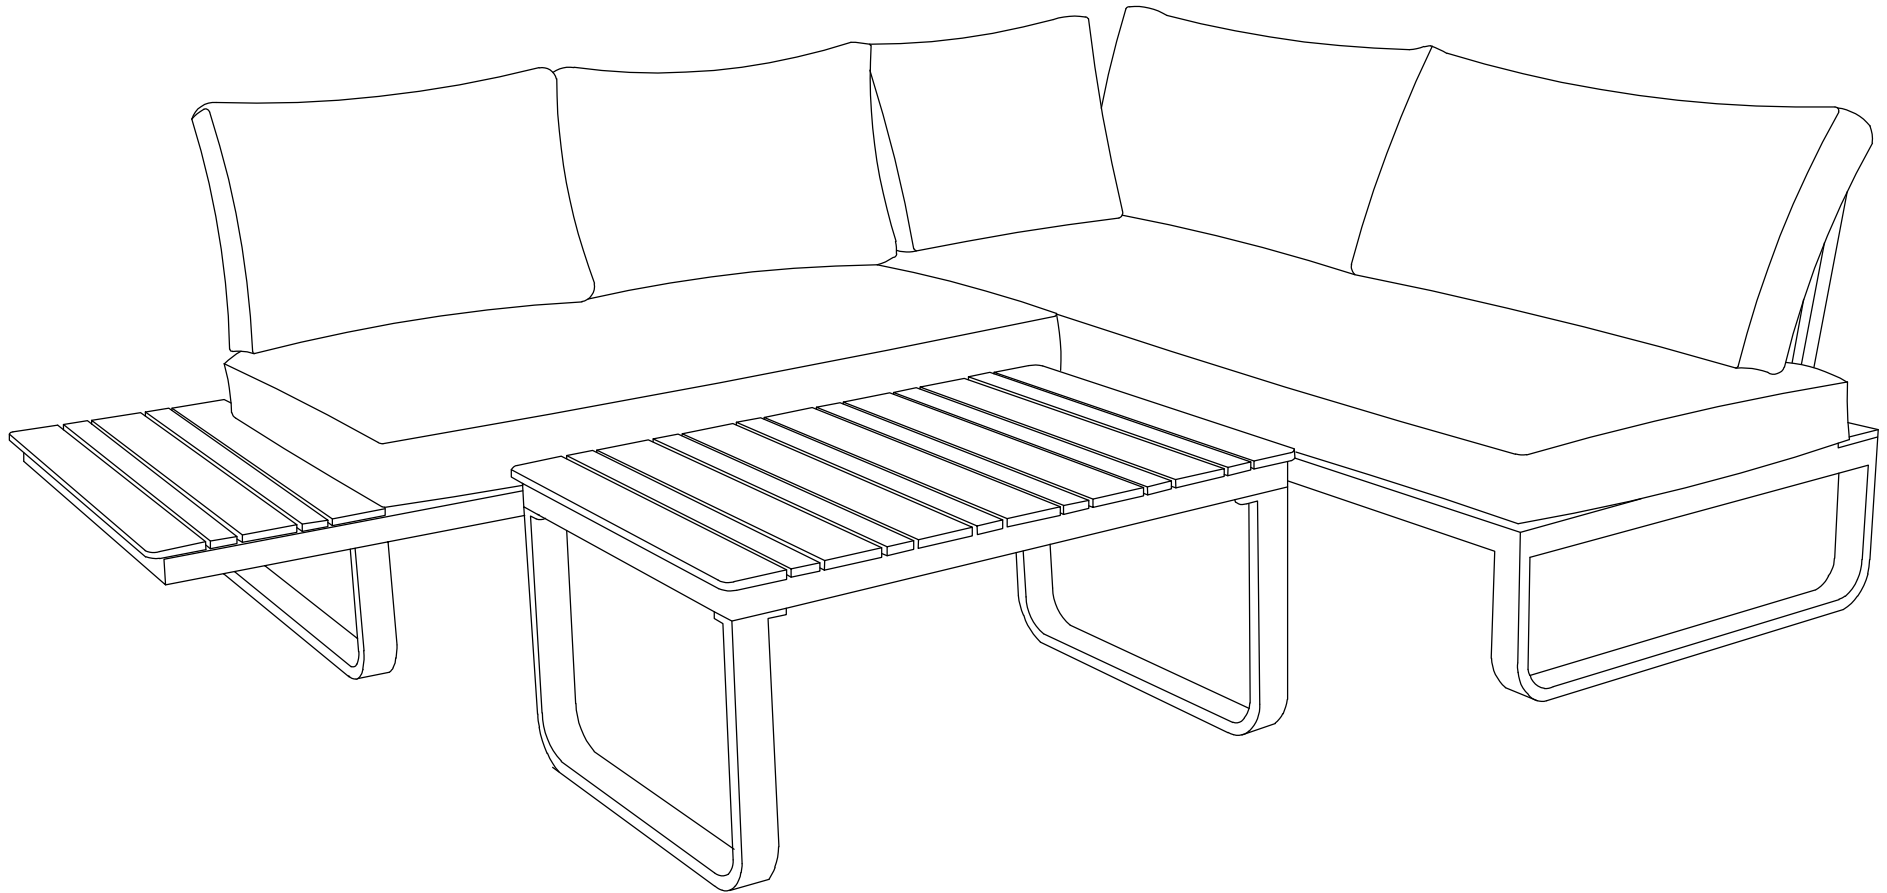
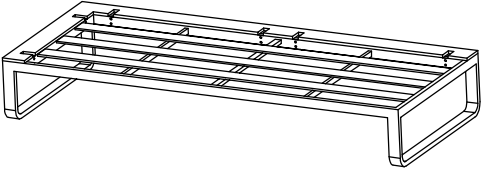
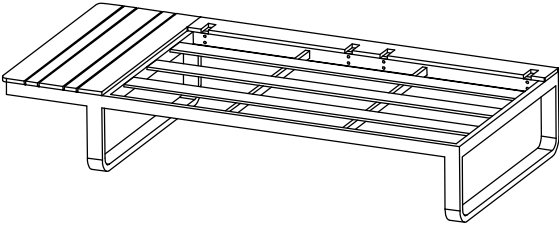
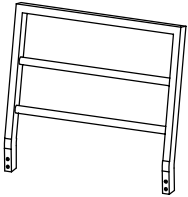
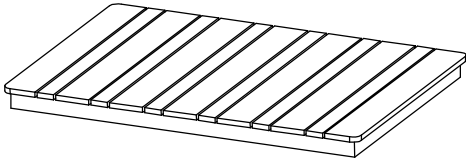
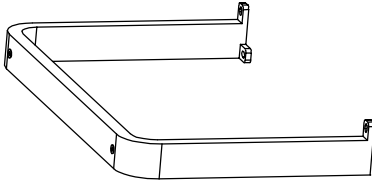





Assembly Instruction

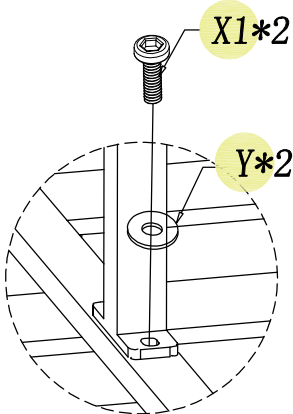

NO.		QTY	NO.		QTY	NO.		QTY
A		1	B		1	C		2
D		3	E		1	F		2
G		1	X1	 M6*20	10	X2	 M6*35	20
Y		30	Z		1			



STEP 1

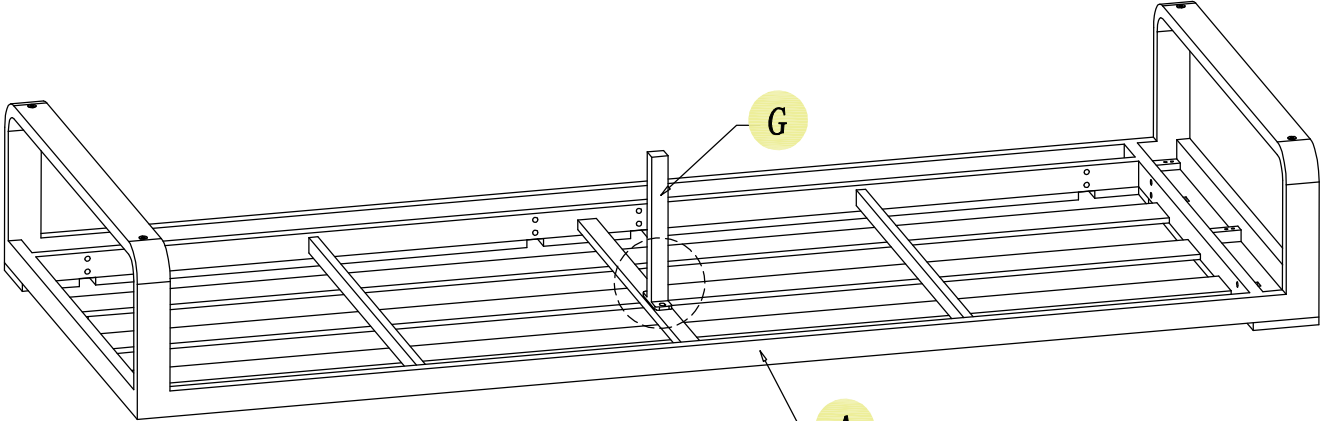

50%





STEP 2

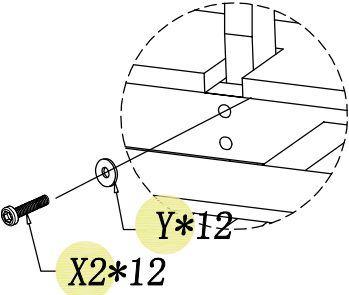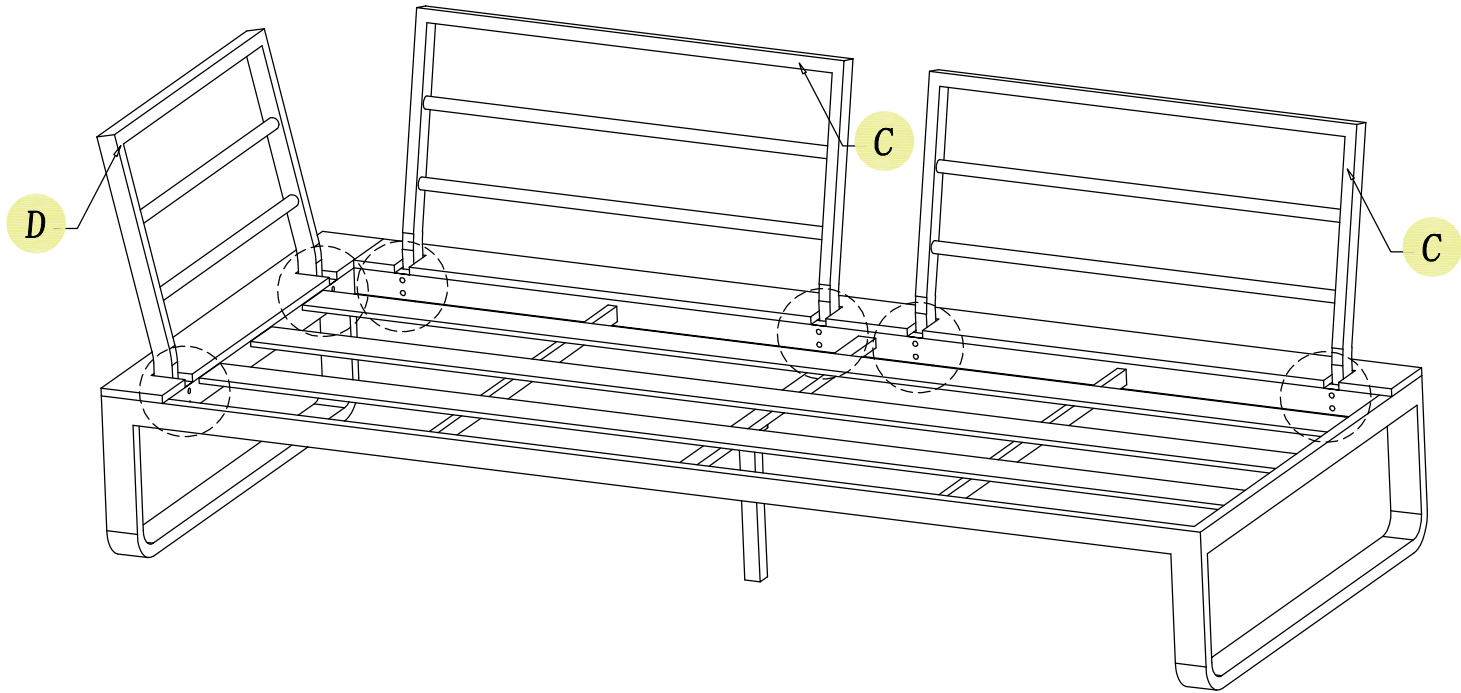


100%



STEP 1

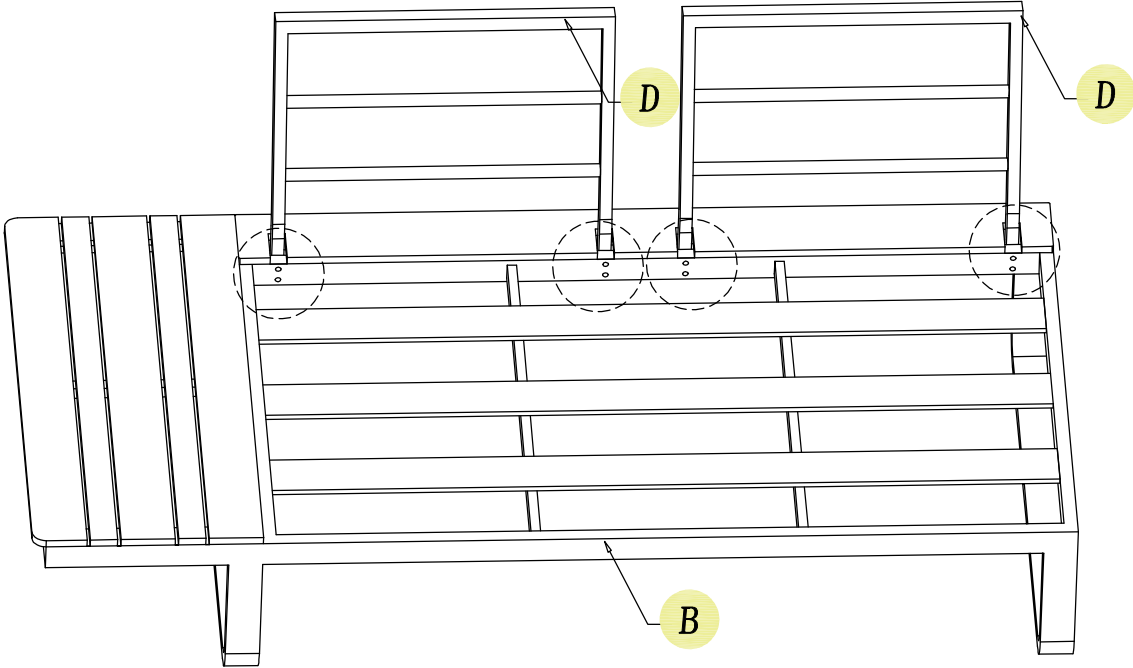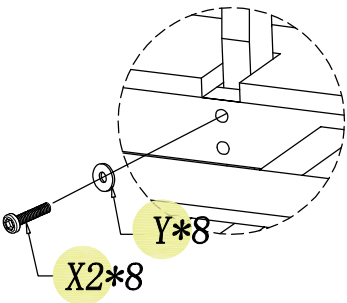

STEP 2

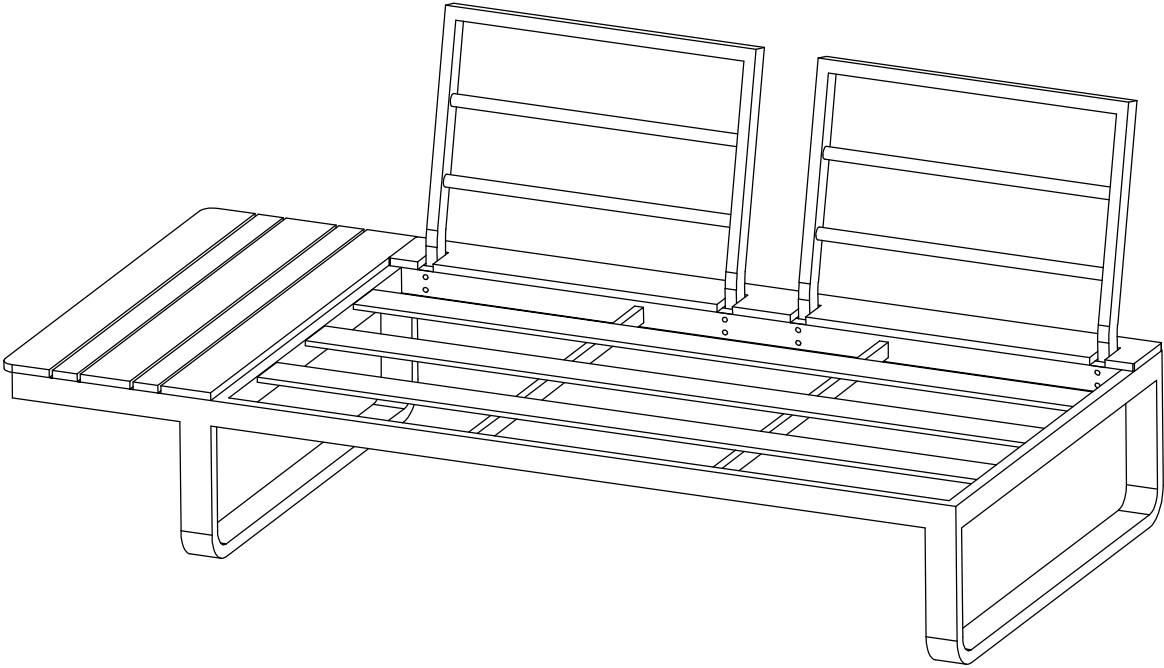


50%



100%




STEP 1

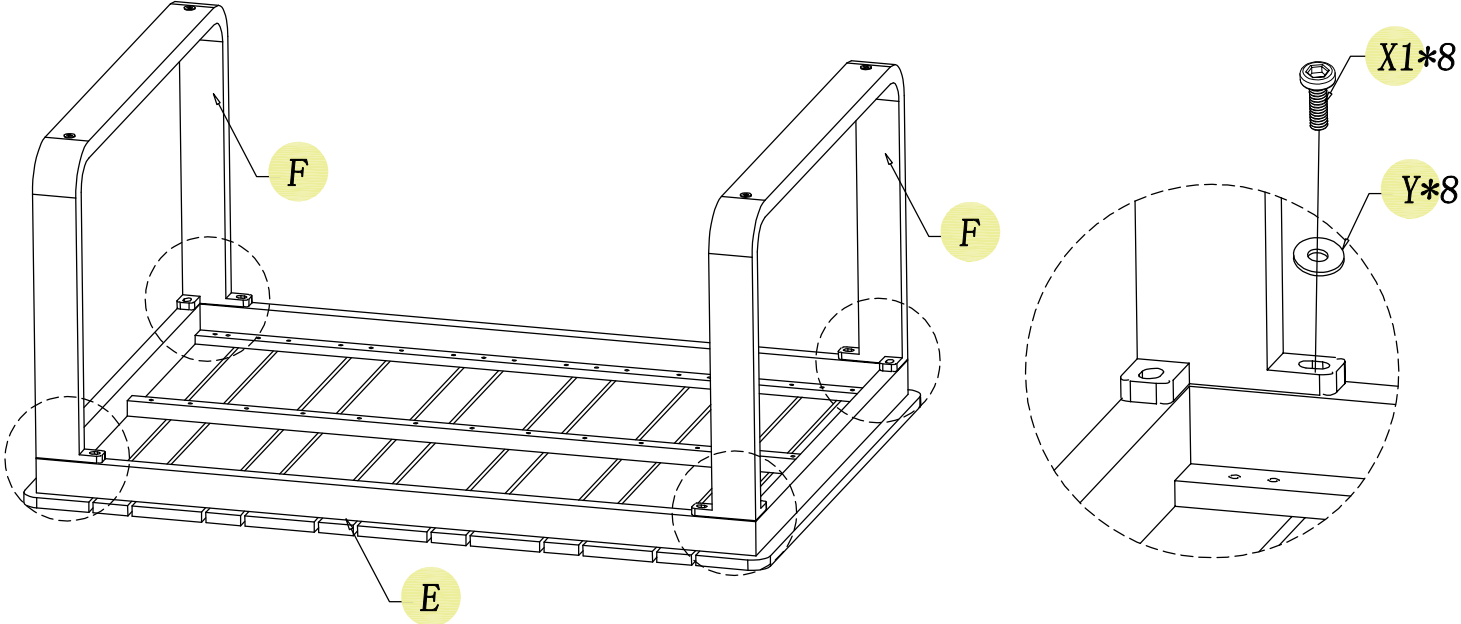

80%



STEP 2

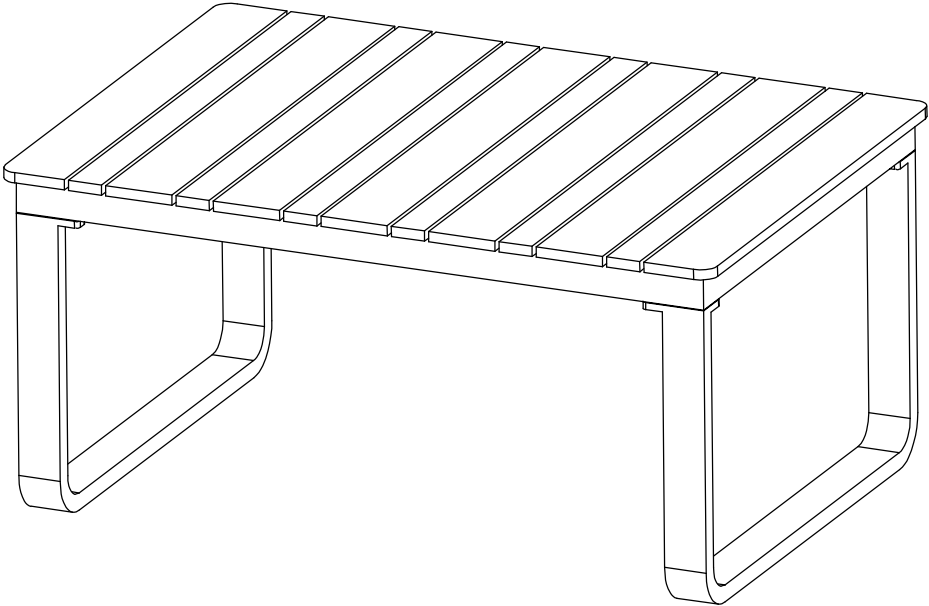

100%

