



ASSEMBLY INSTRUCTIONS

Kit Contents:-


1. Bolts-9Pc.
20 X 8mm



2. Washer-9Pc.
8mm

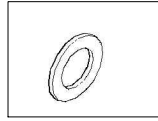

3. Spanner-1Pc.
12-13no.

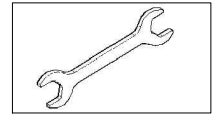

Instructions:-

1. Put the Sideboard upside down on a protective surface with legs.
2. Match the holes on the Sideboard leg with fasteners on the bottom of the Sideboard(See image 2).
3. Secure using bolts, washers & spanner provided.(See image 3)
4. Turn the Sideboard upright and Now Sideboard is ready to use.

