



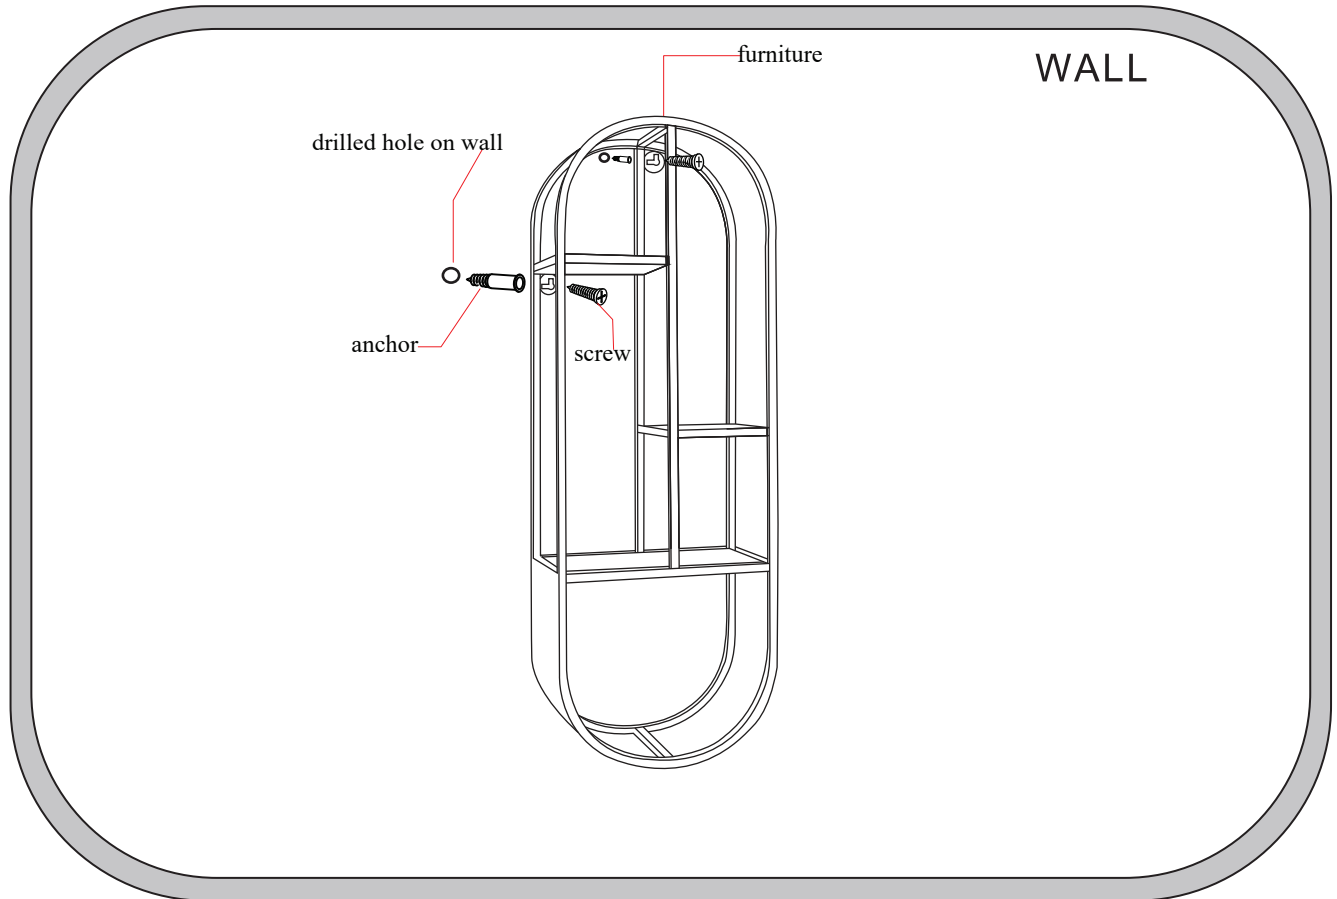
# ASSEMBLY INSTRUCTIONS

## Anti-tipping Hardware Kit

### SHR60

#### HARDWARE & TOOLS

 <p>Anchor 2x</p>	6X25MM	 <p>Screw 2x</p>
--	--------	---



#### STEPS:

- Mark stud locations on wall with corresponding locations at top of furniture
- Move furniture away from wall
- Position bracket on stud
- Drill holes.
- Insert anchors into holes
- Move furniture close to the wall and line up the brackets as shown above.
- Tighten the screws into wall through bracket with help of screw driver.