


ASSEMBLY INSTRUCTIONS

Anti-tipping Hardware Kit

SHR81


HARDWARE & TOOLS



Anchor
2x



Screw
2x
4x25mm

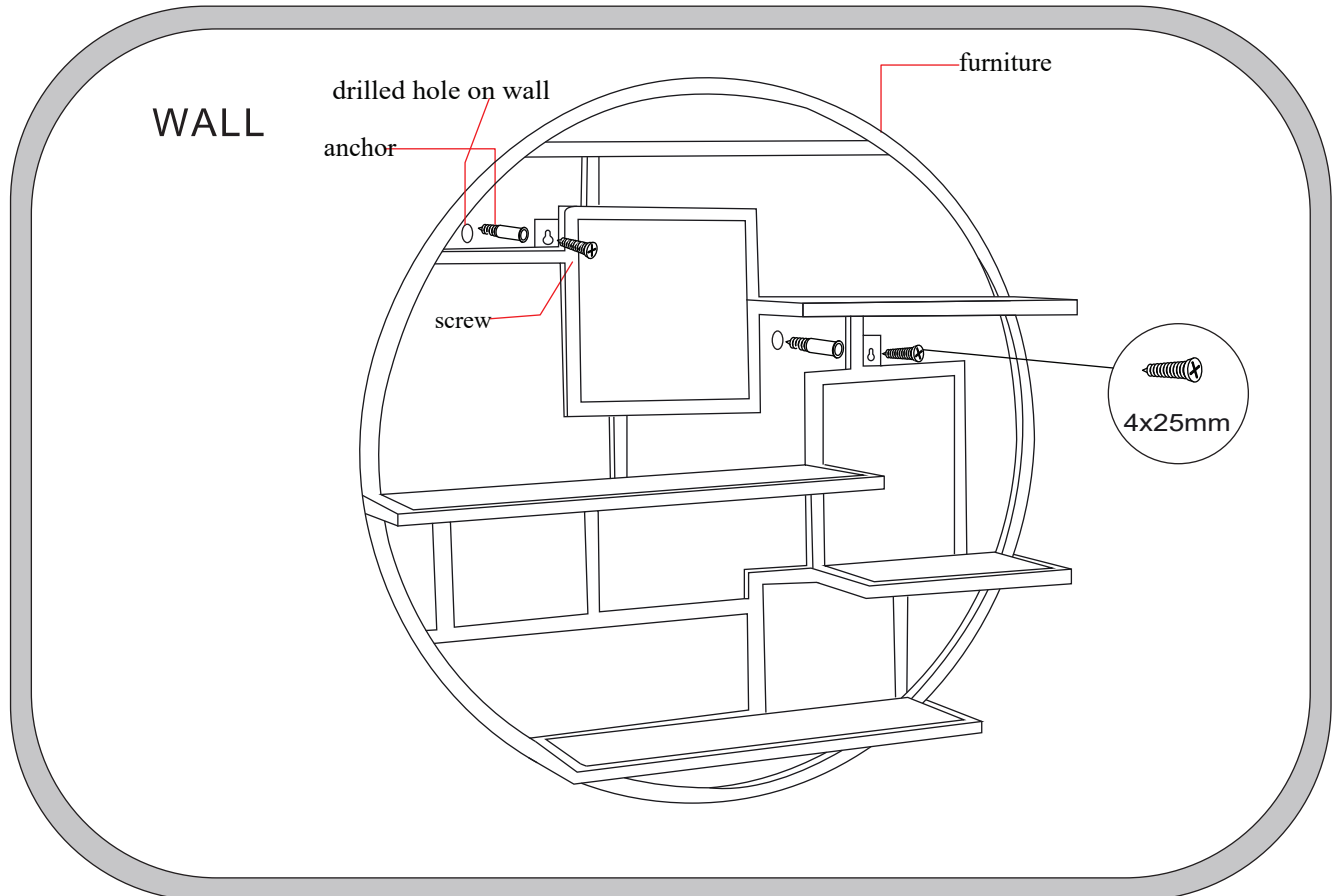

STEPS:

- (a) Mark stud locations on wall with corresponding locations at top of furniture
- (b) Move furniture away from wall
- (b) Position bracket on stud
- (d) Drill holes.
- (e) Insert anchors into holes
- (f) Move furniture close to the wall and line up the brackets as shown above.
- (g) Tighten the screws into wall through bracket with help of screw driver.